


BATHROOM WEBOS SMART TV



PLEASE READ THESE INSTRUCTIONS FULLY
BEFORE INSTALLATION.

WARNINGS:

- Installation must be completed by a technically competent person. If in doubt contact a qualified electrician or AV professional.
- Warranty may become void if failure is as a result of the installation.
- The front screen on this TV is glass and must be handled with care

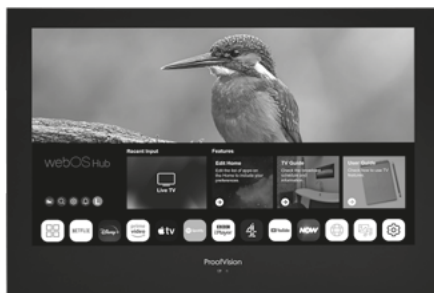

Size	Dimensions of Front Screen	Mounting Plate
19" Bathroom TV	490mm x 335mm x 5mm	473mm x 318mm x 51mm
24" Bathroom TV	594mm x 396mm x 5mm	577mm x 379mm x 51mm
27" Bathroom TV	658mm x 454mm x 5mm	642mm x 438mm x 54mm
32" Bathroom TV	775mm x 508mm x 5mm	760mm x 492mm x 57mm
43" Bathroom TV	1031mm x 661mm x 5mm	1006mm x 635mm x 61mm

Inputs

DC 12V	RJ45	R IN L VIDEO	HDMI 2 (eARC)	HDMI 1 (UART)	USB 1 USB 2	OPTICAL OUT	DVB-S2	DVB-T2/C	CI 3.5MM AUDIO OUT
--------	------	-----------------------	------------------	------------------	----------------	----------------	--------	----------	--------------------------

Pre-Installation

- Make sure that all accessories in contents listing are present - See User Guide booklet, page 9.
- We recommend setting up the TV before installing, to test all required functions are working properly.
- The wall chosen for install is level. Bathroom TVs use magnets to attach the TV to the back-mounting plate. It is therefore essential the wall is flat.
- Decide on the height of your TV. We recommend as close to eye level as possible to ensure maximum visibility.
- Avoid locations in direct sunlight, as this may cause screen glare.
- ProofVision Bathroom TVs must be recessed into the wall and must be sealed to the surrounding wall using a bathroom silicone sealant.

- While Wi-Fi is available, the receivers are at the back of the TV and will be inside the wall. To maximize connectivity and prevent streaming issues, we highly recommend either a wired internet connection or installing a Wi-Fi booster nearby.

Testing the TV prior to install

1. Carefully lift the TV from the box, leaving the protective endcaps on the TV. Place the TV on a flat surface.
2. One side at a time, remove the foam endcaps and remove the protective plastic bags.
3. Remove the back-mounting box from the back of the TV. Be aware it's secured with magnets.
4. Place the 2 endcaps on the flat surface and lay the TV face down on these endcaps to protect the glass front of the TV.

BATHROOM WEBOS SMART TV



5. Remove the inputs cover from the back of the TV using a Phillips screwdriver.
6. Connect required signal inputs (Aerial, HDMI etc.) and power supply.
7. Fit the battery (supplied) to the remotes.
8. Turn on the screen using the power button on the remote, the standby light should flash between red and green and the initial WebOS setup screen will appear.
9. Follow the on-screen instructions to setup the TV and test the functionality of required inputs.
10. After testing has been done, remove all the cables and replace the inputs cover, refit the endcaps and place the TV in the original box until the back box has been installed.

First Fix Installation (Power & back mounting box)

1. Mark out the location you will install the TV, ensuring sufficient space to locate the backbox. All edges of the cutout should be at least 20mm clear of any obstruction to allow for the glass front to sit on top of the tiles.
2. Locate the nearest power supply (such as a loft space or adjacent room) and choose an accessible location for the transformer.
3. Chase cabling from the backbox to the transformer - the provided cable length combined is 1.8m. This can be extended - we recommend sourcing a longer 240v mains kettle lead to ensure adequate power gets to the TV, low-voltage DC extenders can result on voltage drop.
4. Create the recess for the back-mounting plate using the dimensions on page 1 for your size of TV
5. Insert the TV's mounting plate to the cutout. We recommend that the edge of the back-box is aligned with the edge of the tile, which will result in the TVs glass front sitting neatly proud of the tiles.
6. Secure the plate with the screws provided.
7. Bring through the cables from the bottom of the mounting plate.

Installing the TV

1. Unscrew and remove the inputs cover on the back of the TV.
2. Insert all cables into ports and rest wires on the foam at the bottom.
3. Once all cables are in place, re-attach the inputs cover and re-insert screws to secure in place.
4. To mount the TV into the mounting plate, bring the TV up to the hole and start to slowly push the screen into its housing. Take care not to snag or pull against any cables during the install, and remember the front is glass. Please take care and do not slam the TV as excess force may cause damage to the front glass screen.
5. Turn on the screen using the power button on the remote. We recommend testing all functionality, including Wi-Fi, before continuing to the next step.

Sealing the TV

1. Once you are happy that the Bathroom TV is in place and working, a silicon-based sealant will need to be applied to complete the installation. This is to prevent water entry to the back of the unit.
2. Apply the sealant around all 4 edges of the TV.
3. You can use a silicone profile tool to neaten how the silicone looks while keeping the seal in place

IMPORTANT: Sealing the TV is an important instruction to prevent water ingress to the back of the TV. Failure to seal the TV against the wall may cause faults/damage which will not be covered under warranty.



For more troubleshooting information, scan the QR code.